

# Best Practices for Setting Static IP Addresses on Cisco Business Hardware

## Introduction

A Local Area Network (LAN) might be as big as several buildings or as small as a home. Everyone connected to the LAN is in the same physical location.

In a LAN, the router assigns each device its own unique internal IP address. They follow a pattern as follows:

- 10.0.0.0 /8 (10.x.x.x)
- 172.16.0.0 /12 (172.16.x.x - 172.31.x.x)
- 192.168.0.0 /16 (192.168.x.x)

These addresses are only visible inside a network, between devices, and are considered private from outside networks. There are potentially millions of locations that might have the same pool of internal IP addresses as your business. It doesn't negatively affect your addressing scheme, as they are only used within their own private network, and hence, there is no conflict.

There are special configurations that can be done, but there are some standard things to keep in mind. In order for the devices in the network to communicate with each other, they should all follow the same pattern as the other devices. They should also be on the same subnet, which is the organizational method within the IP addressing scheme. Each IP address must also be unique. You should never see any of these addresses in this pattern as a public IP address, as they are reserved for private LAN addresses only.

All of these devices send data through a default gateway (a router) to move data out to the Internet. When the default gateway receives the information, it needs to do Network Address Translation (NAT), which encapsulates the IP address to be publicly facing. Since anything going out across the Internet needs a public IP address, this encapsulation ensures the data can find its way back to the requestor.

Manually assigning IP addresses can be a secure method of IP addressing, being a manual process, there are network scaling issues that can occur. To solve manual assignment, Dynamic Host Configuration Protocol (DHCP) is a protocol that automatically assigns IP addresses to devices in a network. Devices that use DHCP are automatically given a dynamic IP address in the proper subnet mask. This pool of available IP address can change over time as addresses are assigned or abandoned.

You can configure the internal IP address to stay the same by configuring static DHCP on the router or assign a static IP address on the device itself. From that point forward, that device will keep the same IP address unless manually changed or if the router is reset to factory default.

**Note:** Public IP addresses are not guaranteed to stay the same either, unless you pay to have a static public IP address through your Internet Service Provider (ISP). Many companies pay for this service so their employees and customers have a more reliable connection to their servers (web, mail, VPN, etc.) but it can be expensive.

Some small businesses can leave all their IP addresses dynamic. With DHCP, devices can be added or removed without any issues. DHCP assigns each device a local IP address that is

unique from all others and in the same subnet so there are no conflicts and they can all communicate with each other.

## Objective

This article gives the reader general information about static IP addresses and some recommended best practices when using Cisco Business hardware.

## When Should a Device have a Static IP Address?

If you need constant access to a device, or server, in the network it would be beneficial for that address not to change. Here are some examples:

- Your router. In order to access the network while you are away from the LAN, whether connecting a computer to work from home, or accessing a surveillance camera connected to the network.
- You share a printer within the network.
- You have two or more routers in the network.
- You host a file server such as a web server or File Transfer Protocol (FTP) server.

A DHCP server – a DHCP server is likely to automatically have a static address.

- Your network doesn't support DHCP.

## What Devices Don't Typically Need a Static IP Address?

If you do not need constant access to a device in the network it would be beneficial and much less complicated to use DHCP. In a network, there may be hundreds of these devices and it would be very difficult to keep track of which addresses have been used. These devices may often be moved between networks and in order to connect, the IP address needs to change. With DHCP, this is done automatically. Here are some examples:

- Mobile phones
- Computers
- VoIP phones

## What are the Challenges when Using Static IP addresses?

- The administrator has to keep track of all devices and the static IP addresses they have been assigned.
- If the same static IP addresses are assigned to two different devices they will both be unable to communicate on the network. This can be prevented if the administrator has kept good notes on the topology of the network.
- If DHCP assigns an IP address that is already assigned as a static IP address, those devices can't communicate. The solution for this problem is to assign blocks of IP addresses for DHCP and different blocks for static addressing.

## Cisco Business Recommendations


1. Keep good notes including each static IP and Media Access Control (MAC) address.
2. Only assign a static IP address if necessary.
3. Reserve a block of addresses for DHCP and a separate block for static addressing.
4. Only use addresses from the 10.0.0.0 /8 (10.x.x.x), 172.16.0.0 /12 (172.16.x.x - 172.31.x.x), or 192.168.0.0 /16 (192.168.x.x) pattern.
5. Do not use an address that ends in .0 as those are typically reserved for networks.
6. Do not use an address that ends in .1 or .254, as those are often the default IP addresses of devices. The first or last usable IP address of a network is so common that a hacker would most likely use it to try to access the network.
7. Do not use the last IP address of the IP Network pool, ending in .255, as they are reserved for the broadcast address.
8. In general, it is recommended to use different LAN IP subnets (or different subnet masks) at both ends while configuring VPN between different sites. For example, if the site you connect to uses a 192.168.x.x addressing scheme, you would want to use a 10.x.x.x or 172.16.x.x - 172.31.x.x subnet. When you change your router IP address, the devices on DHCP would automatically pick up an IP address in that subnet.

## How to View or Change the Pool of IP Addresses for DHCP

On your router, you can view or change the range of IP addresses that are reserved for DHCP. If you would like some help logging in, click [here](#).

## Instructions for the RV160, RV260 or RV34x Series Routers

Step 1. Navigate to **LAN > VLAN Settings**.

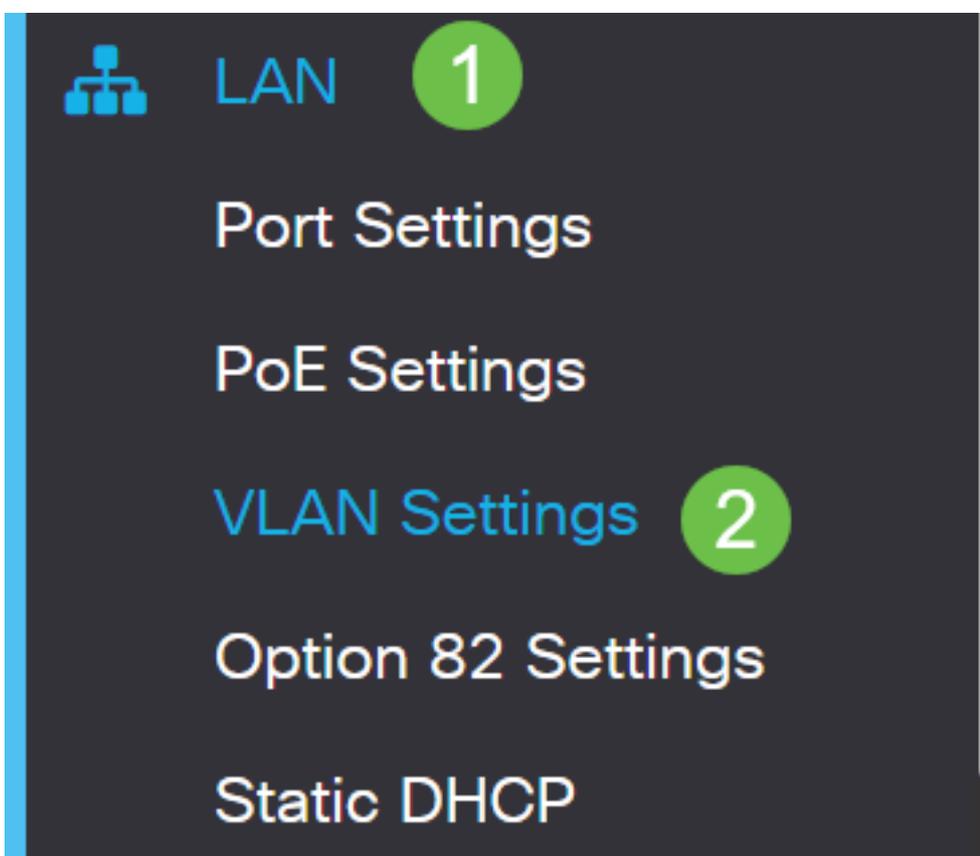

**Note:** If you are using a RV160, RV260, or RV34x router and are not seeing the Graphical User Interface (GUI) shown in the previous section, it is highly recommended that you upgrade to the

latest firmware. This should update your router to the new GUI. Check to see the latest firmware by clicking [here](#).

If you would like instructions on how to upgrade firmware on an RV34x router, click [here](#).


If you would like instructions on how to upgrade firmware on an RV160 or RV260 router, click [here](#).

Step 2. Click the checkbox for the *VLAN ID*, the default is VLAN 1. Cisco Business routers automatically reserve 50 IP addresses for DHCP. You can change the range here to whatever you prefer, but this is usually sufficient for smaller networks. Be sure to take note of this so that you do not assign any static IP addresses in this range.

<input type="checkbox"/>	VLAN ID	Name	Inter-VLAN Routing	Device Management	IPv4 Address/Mask
<input checked="" type="checkbox"/>	1	Default	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	IP Address: 192.168.1.1 / 24 Subnet Mask: 255.255.255.0 DHCP Type: <input type="radio"/> Disabled <input checked="" type="radio"/> Server <input type="radio"/> Relay Lease Time: 1440 min. Range Start: 192.168.1.100 Range End: 192.168.1.149 DNS Server: Use DNS Proxy WINS Server:

## Instructions for All Other Routers

Step 1. Navigate to **DHCP >DHCP Setup**.

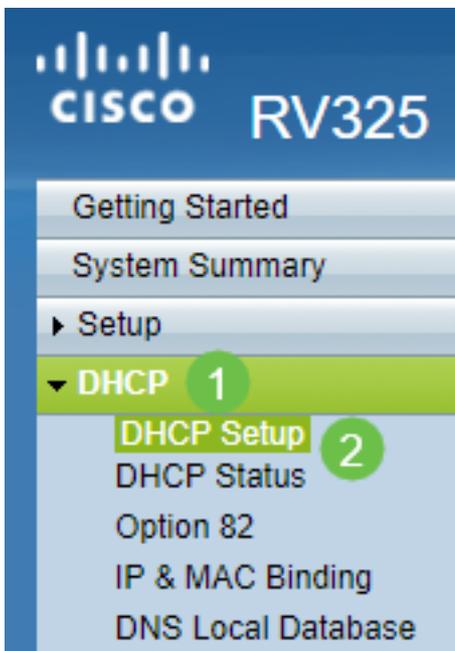

Step 2. Select the *VLAN ID*, the default is VLAN 1. Cisco Business routers automatically reserve 50 IP addresses for DHCP. You can change the range here to whatever you prefer, but this is usually sufficient for smaller networks. Be sure to take note of this so that you do not assign any static IP addresses in this range.

The image shows the DHCP Setup configuration page for IPv4. The page has tabs for IPv4 and IPv6. The configuration options are: VLAN ID (set to 1, with a green circle '1' next to the dropdown), Device IP Address (192.168.1.1), Subnet Mask (255.255.255.0), DHCP Mode (DHCP Server selected), Remote DHCP Server (0.0.0.0), Client Lease Time (1440 min), Range Start (192.168.1.100, with a green circle '2' next to the input), Range End (192.168.1.149), and DNS Server (Use DNS Proxy).

## How to Assign Static IP Addresses

There are a few options for assigning a static IP address to a device. The first option is to configure all static IP addresses on the main router. This is an easy way to have all of the static IP addresses in one location. However, if you reset the router to factory settings, all configured static


IP addresses will be deleted.

The second option is to configure it directly on each device. If a static IP address is configured directly on a device, and it gets reset, it will likely revert to DHCP and pick up a different IP address.

## Configuring Static DHCP on a Router

To configure static DHCP on the router, you will need to know the MAC address for each device. This is the unique identifier for each device that consists of letters and numbers. The MAC address does not change. It can be found on the body of the Cisco device. It is labeled *MAC* and is typically shown with a white background.

Step 1. Log into the router. Navigate to **LAN > Static DHCP**.

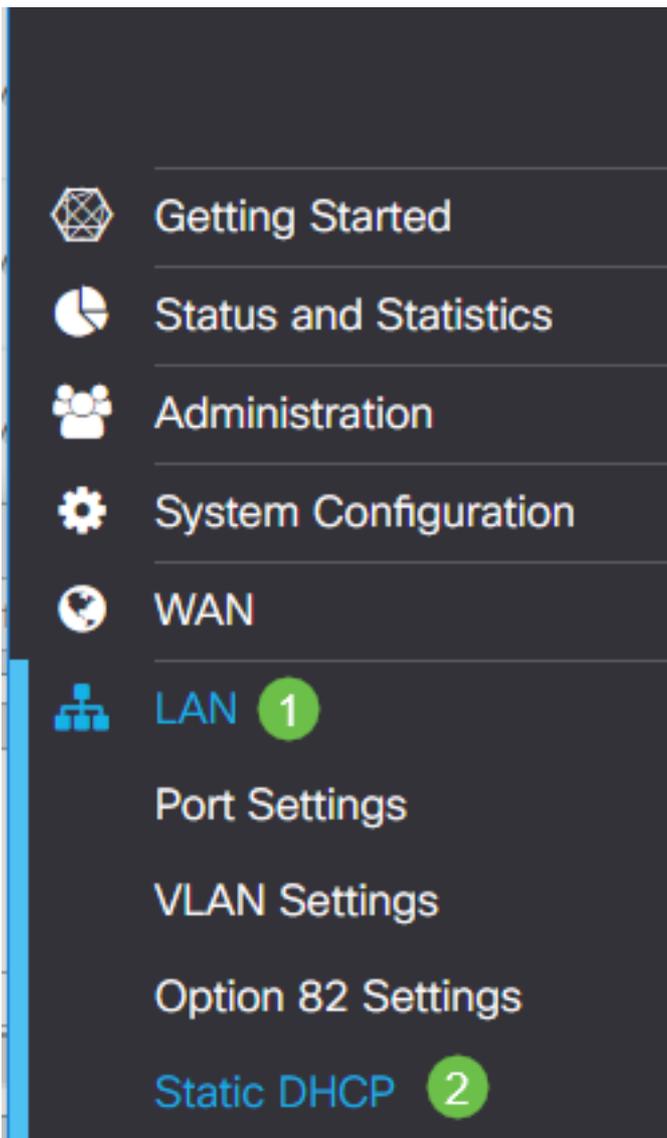

Step 2. Complete the following steps to assign a static IP.

- Click the **plus icon**.
- Create a **Name** that will help you associate the device that is listed, such as **SG550 Switch**.
- Enter the **MAC address** of the device.
- Enter the **Static IPv4 Address**. Make sure you use an address that is not in the DHCP pool.
- Make sure the **Enabled** box is checked.

- Click **Apply**.

## Static DHCP

6

Apply

Cancel

Show Connected Devices...

### Static DHCP Table



<input type="checkbox"/>	Name	MAC address	Static IPv4 Address	Enabled
<input type="checkbox"/>	SG550 Switch	00:26:0B:0D:81:44	192.168.1.220	<input checked="" type="checkbox"/>

You will need to repeat this process for each device you would like to assign a static IP address.

## Configuring Static IP Address on a Switch

Step 1. Log in to the switch. Navigate to **IP Configuration > IPv4 Interface**.



# SG550XG

Getting Started

Dashboard

Configuration Wizards

Search

▶ Status and Statistics

▶ Administration

▶ Port Management

▶ Smartport

▶ VLAN Management

▶ Spanning Tree

▶ MAC Address Tables

▶ Multicast

▼ **IP Configuration** **1**

▼ IPv4 Management and Inter

**IPv4 Interface** **2**

IPv4 Static Routes

Step 2. Click **Add**.

## IPv4 Interface

IPv4 Routing:  Enable

Apply

Cancel

### IPv4 Interface Table

<input type="checkbox"/>	Interface	IP Address Type	IP Address	Mask	Status
<input type="checkbox"/>	XG1/6	DHCP	0.0.0.0	255.255.255.255	Not received
<input type="checkbox"/>	OOB	DHCP	0.0.0.0	255.255.255.255	Not received
<input type="checkbox"/>	XG1/1	Static	2.2.2.2	255.255.254.0	Valid
<input type="checkbox"/>	LAG 1	Static	3.3.3.3	255.255.255.0	Valid
<input type="checkbox"/>	VLAN 1	Static	10.5.229.44	255.255.255.224	Valid
<input type="checkbox"/>	Loopback1	Static	88.8.8.8	255.255.255.0	Valid
<input type="checkbox"/>	OOB	Default	192.168.1.254	255.255.255.0	Valid

Add...

Edit...

Delete

Step 3. Select the *Static IP Address* radio button. Enter the desired *Static IP address* and *Subnet Mask*. Click **Apply**.

Interface:  Unit 1  Port XG1  LAG 1  VLAN 1  Out of Band

IP Address Type:  Dynamic IP Address  
 Static IP Address

IP Address: 192.168.1.200

Mask:  Network Mask 255.255.255.0  
 Prefix Length (Range: 8 - 30)

Apply Close

## Configuring Static IP Address on a Wireless Access Point (WAP)

Step 1. Log into the WAP. Navigate to **LAN > VLAN and IPv4 Address**.



Step 2. Select the *Static IP* radio button. Enter the desired *Static IP address* and *Subnet Mask*. You also need to specify *Default Gateway* and *Domain Name Servers (DNS)* server address. Click **Save**.

**Note:** Usually both the default gateway and the DNS server are the LAN IP address of the router; however the DNS server for Google, 8.8.8.8, is sometimes utilized here.

### VLAN and IPv4 Address

**Global Settings**

MAC Address: 68:86:A7:FE:7C:A0

Untagged VLAN:  Enable

Untagged VLAN ID:  (Range: 1 - 4094, Default: 1)

Management VLAN ID:  (Range: 1 - 4094, Default: 1)

---

**IPv4 Settings**

Connection Type:  DHCP  Static IP

Static IP Address:  .  .  .

Subnet Mask:  .  .  .

Default Gateway:  .  .  .

Domain Name Servers:  Dynamic  Manual

.  .  .

.  .  .

## Configuring Static IP Address on a Printer

In this example, you would select **Network > IPv4**. You would then select the *Manual IP* radio button, fill in the *Manual IP Address*, *Manual Subnet Mask*, and *Manual Default Gateway*. You would also assign a *DNS server*. Click **Apply**.

**Note:** This printer is not a Cisco product and is not supported by Cisco. These instructions are only provided for general illustration purposes.

The screenshot displays the HP Officejet Pro 8600 N911n Embedded Web Server interface. The top navigation bar includes 'Home', 'Scan', 'Fax', 'Web Services', 'Network', 'Tools', and 'Settings'. The 'Network' tab is selected, and the 'IPv4' configuration page is shown. The page is divided into two main sections: 'IP Address Configuration' and 'DNS Address Configuration'. In the 'IP Address Configuration' section, the 'Manual IP' radio button is selected. The 'Manual IP Address' field is set to 192.168.1.113, the 'Manual Subnet Mask' is 255.255.255.0, and the 'Manual Default Gateway' is 192.168.1.1. A 'Suggest a Manual IP Address' button is visible below these fields. In the 'DNS Address Configuration' section, the 'Manual DNS Server' radio button is selected. The 'Manual Preferred DNS Server' is set to 8.8.8.8, and the 'Manual Alternate DNS Server' is set to 8.8.4.4. At the bottom right, there are 'Apply' and 'Cancel' buttons. Numbered callouts (1-9) are placed throughout the interface to highlight specific steps in the configuration process.

## Conclusion

There you have it! Now you have a starting off point for IP addressing in your network.

Click on the hyperlinks for more information on the following topics:

- [Configure Static Internet Protocol \(IP\) Address Settings on a Cisco IP Phone 6800, 7800, or 8800 Series Multiplatform Phone](#)
- [Setting a Static IPv4 Address on a Switch using the Graphical User Interface \(GUI\)](#)
- [Setting Static IPv4 Addresses on a Switch via Command Line Interface \(CLI\)](#)
- [Creating a Text File to Adjust IP Settings on a Switch](#)